

Instruction Manual

Drum Lifter



Note: The Owner/Operator must read carefully and understand all the information presented here before operation.

THANK YOU FOR USING THIS DRUM LIFTER. FOR YOUR SAFETY AND CORRECT OPERATION, PLEASE CAREFULLY READ THIS INSTRUCTION BEFORE USING IT.

NOTE: All of the information reported herein is based on data available at the moment of printing. The factory reserves the right to modify its own products at any moment without notice and incurring in any sanction. So it is suggested to always verify possible updates.

1. WARNING

- 1) Read and understand the entire owner's manual before using the drum lifter.
- 2) This drum lifter is designed to lift drums in horizontal or vertical position. The drum must have a lipped edge for the claws to engage.
- 3) Do not load the lifter beyond its rated capacity of 1,100lbs.
- 4) Inspect the drum lifter before each use. If there is damage or distortion to any part, the lifter must be removed from service until it is repaired or replaced.
- 5) Make sure the drum is secured by the claws before raising.
- 6) Do not allow anyone to stand beneath a raised drum.
- 7) Never leave a drum unattended in the raised position.
- 8) Do not use this drum chain sling for other than is intended use.
- 9) Failure to comply with these warnings may result in personal injury and/or property damage.

2. OPERATION OF DRUM LIFTER

- 1) Place the drum lifter upon the hook of your hoist, chain block, etc.
- 2) Lower the lifter over the drum, and make sure the claws lock evenly under the rims of the drum.
- 3) Carefully move the drum to desired location. When drum has been completely lowered to the floor or pallet, allow the drum lifter to slacken and disengage the claws from the drum.

3. SPECIFICATION

Lift Capacity.....	1100 lbs
Drum Size.....	55 gallon (210 liter)
Net Weight.....	8 lbs